## Appia Life 1 Group

Installation Requirements



## Water

3/8" dedicated cold water line with shut-off valve and compression fitting.

Water hardness 3gpg or 50 ppm. Line pressure 2-4bar, cold water. Water flow rate Minimum 1 GPM Filtration < 1.0 micron **TDS** 50-250 ppm Alkalinity 10-150 ppm Chlorine < 0.50 ppm РΗ 6.5-8.5



Volts: 110 (range of 110-125)

Watts: 1500 Amp draw: 13

Receptacle: Nema 5-15

Outlet needs to be within 3ft


## Drain

Open gravity drain of minimum 1.25 inch I.D., within 4 feet of the machine.

## Counter Space & Drain Hole Location

Depth: 21 inches Width: 16 inches

Photo

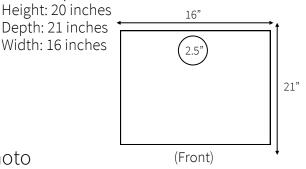


Please attach a photo of the completed worksite.








Nema 5-15 (receptacle)

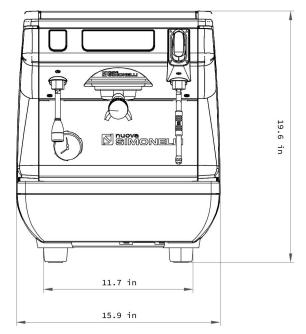

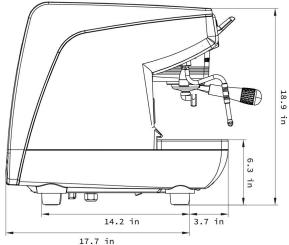

I, the customer, understand that these requirements must be in when the installer arrives. Failure to have the site ready will result in additional service and travel charges, and may cause further delays in installation.			
Customer Name:		Signature:	
Company Name:			
Phone:	Email:	Sales Order:	

