# Appia Life Compact 2 Group 110v

Installation Requirements



### Water

• 3/8" dedicated cold water line with shut-off valve and compression fitting.

6.5-8.5

Water hardness
Line pressure
Water flow rate
Filtration
TDS
Alkalinity
Chlorine
3gpg or 50 ppm.
4-4bar, cold water.
Minimum 1 GPM
≤ 1.0 micron
50-250 ppm
10-150 ppm
≤ 0.50 ppm



PΗ

• Volts: 110 (range of 110-125)

Watts: 1500Amp draw: 13

• Receptacle: Nema 5-15

• Outlet needs to be within 3ft


#### □ Drain

• Open gravity drain of minimum 1.25 inch I.D., within 4 feet of the machine.

# Counter Space & Drain Hole Location

Height: 20 inchesDepth: 21 inches

• Width: 22 inches

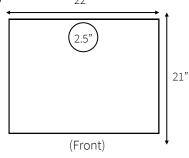

## Photo


 Please attach a photo of the completed worksite.








Nema 5-15 (receptacle

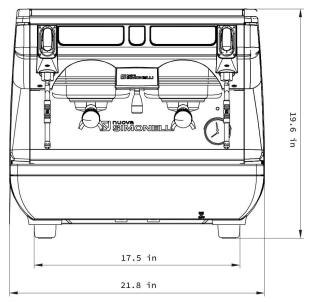

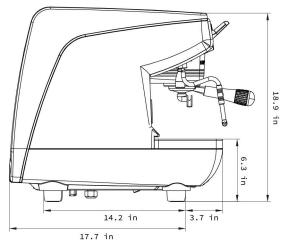

I, the customer, understand that these requirements must be in when the installer arrives. Failure to have the site ready will result in additional service and travel charges, and may cause further delays in installation.		
Customer Name:		Signature:
Company Name:		
Phone:	Email:	Sales Order:



